

Mace Engineering Group MEMCAL

Fitting Instructions



INSTALLING YOUR MACE MEMCAL

Remove Engine fuse or disconnect the battery terminals

Install Memcal as per images below, into PCM

PLEASE ENSURE THAT THE MEMCAL IS INSTALLED CORRECTLY AS PER PICTURES BELOW

Leave engine fuse out for 30 min to reset PCM

Or if you have removed battery terminals the PCM is already reset

DONE



